



SUNCOAST FENCING

designed for easy living

How to measure a Rake

POST (A)



POST (B)



Measurement on the level from POST (A) to POST (B)

STEP 1
We require the measurement on the LEVEL from post to post.

To do this run a string line starting from POST (A) where the ground meets the post and come out on the level to POST (B).
Use a spirit level to ensure this string line is level.

STEP 2
Then measure the DROP distance from the string line on POST (B) to the ground.

Shed 2/12 Barts Street
Woombye Q 4559

p 07 5445 4744

f 07 5445 6025

e info@suncoastfencing.com.au

www.suncoastfencing.com.au